User Manual

CBCI TELECOM • COM

LEARN
Leading English Education and Resource Network

Opening page

The following page is the first that will appear when opening the XPanel program on the computer.

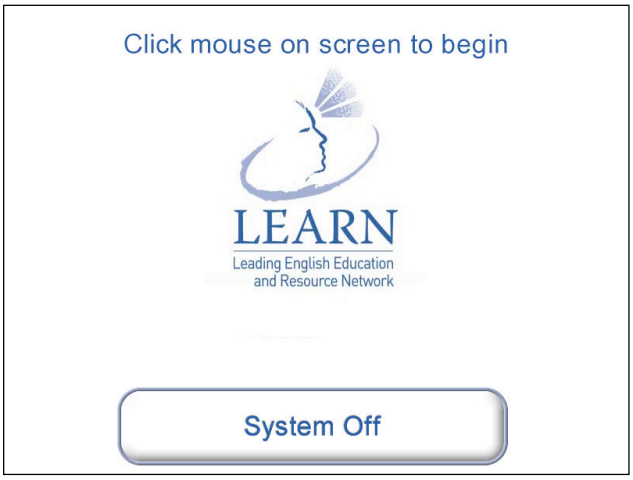

To move on to the following page, click on the screen. The projector will automatically turn on. During the time the projector is turning on, the following page is on the screen.

Wait until the projector warms up and the following page will appear.

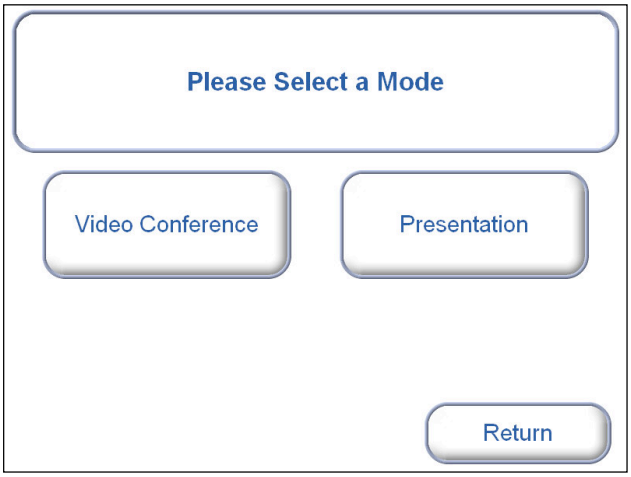

You have the choice between 2 modes; ***Video Conference*** and ***Presentation***. If you want to go back to the previous page, press ***Return***.

Presentation Mode

To enter presentation mode, press the presentation button. The following page will appear.

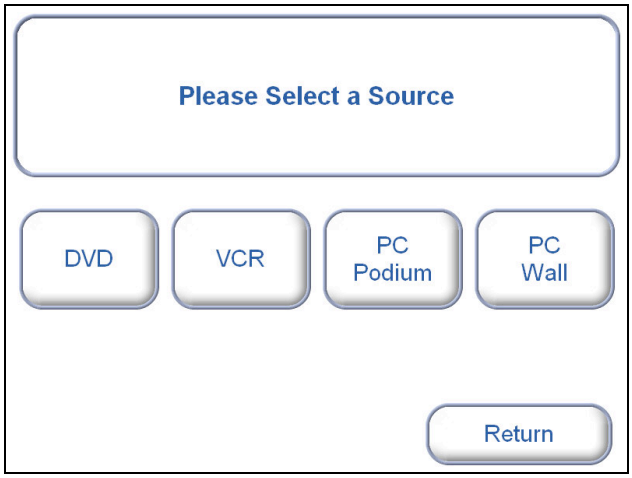

Use presentation mode when you want to do a local presentation. Simply press on the button representing the source you want to present locally.
If you press ***DVD***, the dvd player will be presented on the screen and the controls for the dvd player will appear.

.

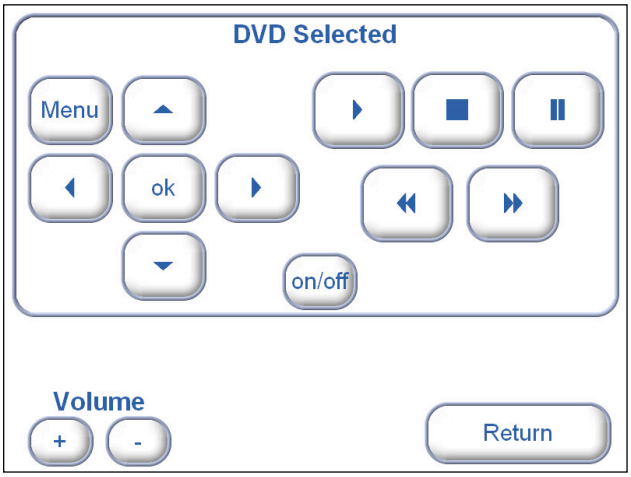

You here have access to the main controls of the DVD player. To return to the previous page, press ***Return***.

If you press ***VCR***, the following page will appear.

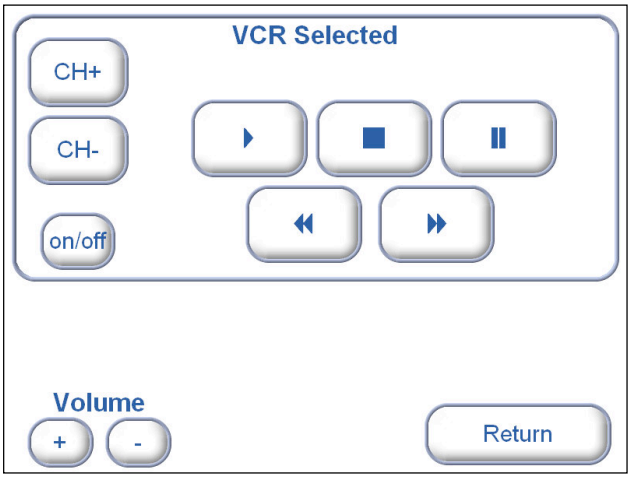

You here have access to the main controls of the VCR. To return to the previous page, press ***Return***.

If you press ***PC Podium***, the following page will appear.

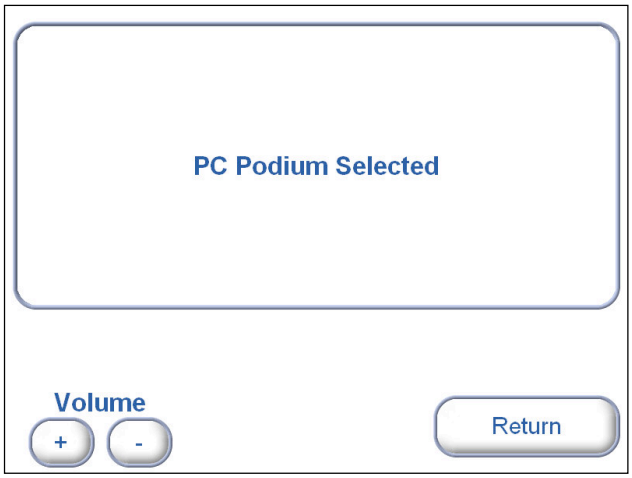

You here have access to the volume level by pressing ***Volume*** + or ***Volume -***. To return to the previous page, press ***Return***.

If you press ***PC Wall***, the following page will appear.

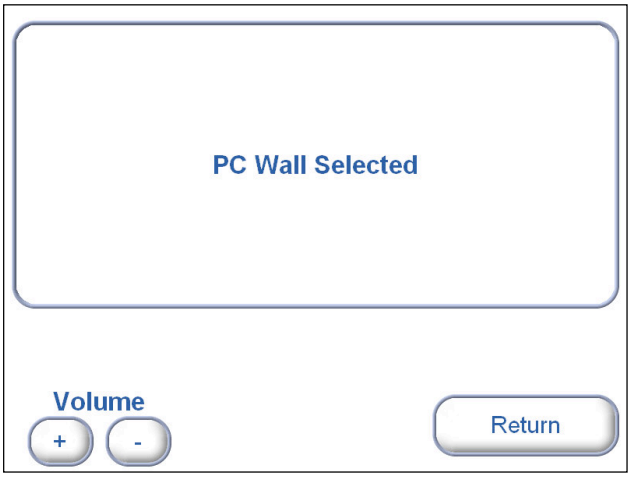

You here have access to the volume level by pressing ***Volume*** + or ***Volume*** **-**. To return to the previous page, press ***Return***.

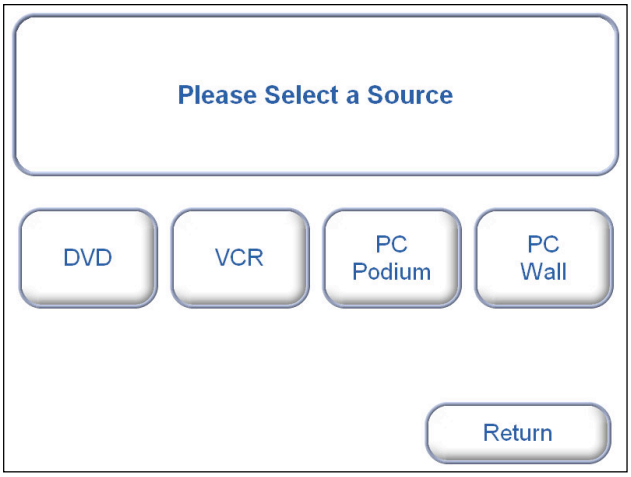

From this page, press on Return to return to the *Select a Mode* page.

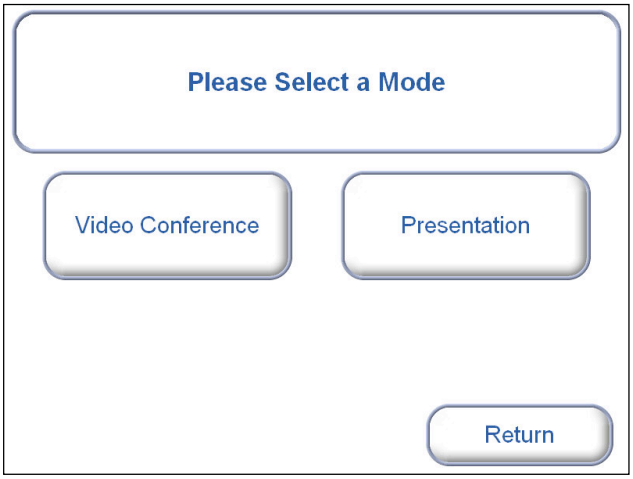

From this page, press on ***Video Conference*** to enter Video Conference Mode. The following page will appear.

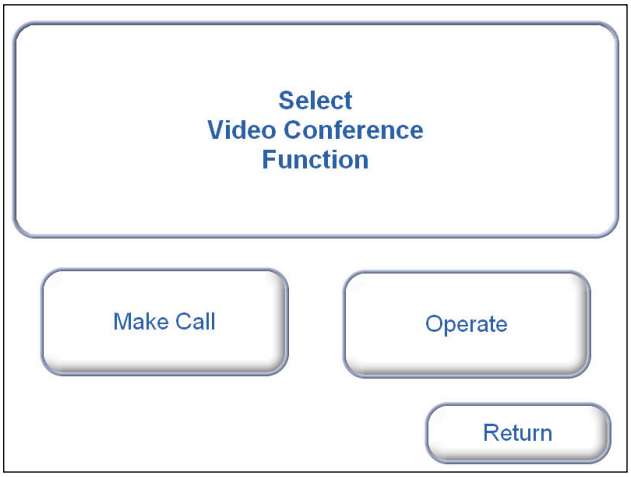

First, to initiate a videoconference call, press on the ***Make Call*** button. The following page will appear. To return to the previous page, press ***Return***.

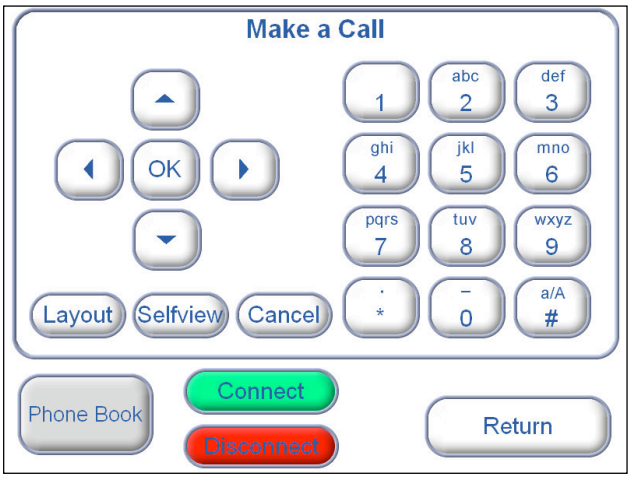

To make a call, simply press on the keypad numbers. The numbers will appear in the bottom of the screen.
Once the number is entered, press on the ***Connect*** button and the call will be launched automatically.

You can use the arrows and the OK button to navigate in the menus of the codec.

Layout: Use this button to change the location of the PIP (picture-in-picture).
Selfiew: Use this button to alternate between the local image and the far end image in full screen.

Cancel: Use this button to delete characters or to make the menu disappear.

Phonebook: Use this button to use the phonebook to make a call. The phonebook will appear on the screen.
Use the arrows and the OK button to navigate in the directory.
First, go in the ***My Contacts*** section, select the site you want to call and press ***Connect***. The call will be launched automatically.

To disconnect a call, click on the ***Disconnect*** button.

To return to the previous page, click on ***Return***.

Once all the calls are connected, go in the Operate section by returning to the previous page and clicking on ***Operate.*** The following page will appear.

In this page, you have access to the main controls of your system.

Main source section

In this section, you can select the main video source to send to the far end. Simply click on the button representing the source you want to send to the far end.

Duo video section

In this section, you can select the duo video source to send to the far end. This means that you will send your duo video source in addition to your main source. For example, you can send the main cam as your main video source and the PC Podium as the Duo Video.

Center Section

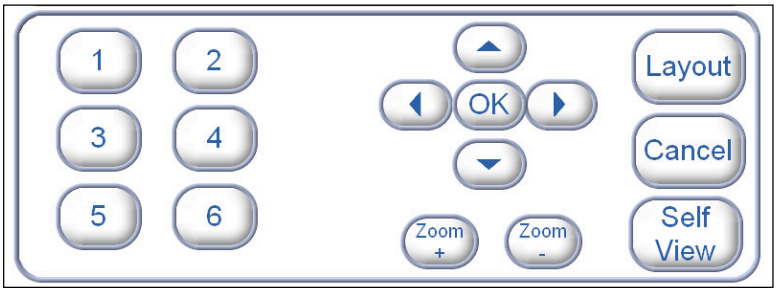

In this section, the buttons with the numbers 1 to 6 represent the camera presets. By clicking on one of the numbers, the camera will automatically move to the position that was saved with the corresponding preset.

The arrows and the OK button are used to navigate in the menu. When there is no menu on the screen, the arrows will control the camera.
The camera is also controlled with the ***Zoom+*** and ***Zoom-*** button.

Layout: Use this button to change the location of the PIP (picture-in-picture).
Selfiew: Use this button to alternate between the local image and the far end image in full screen.
Cancel: Use this button to delete characters or to make the menu disappear.

Bottom section

Volume + and ***Volume - :***Use these buttons to increase or decrease the volume.

Mic Mute: Use this button to cut off the microphones. When in function, the icon on the left will appear on the screen. This means that the far end won't be able to hear you.

Disconnect: Use this button to disconnect a call.

Return: Use this button to return to the previous page.

Turning Off the system

To turn off the system, go back to the following page.

Click on ***System Off.*** The projector will automatically turn off.

The following page will appear.

This page will remain on until the projector cools down.